

Petro Link Solus Quick Setup Guide




Hold SELECT (central button) to start configuring your device

Setting Date and Time

1. Press select on
Set Time to
configure your Time
and Date



2. Use the arrows to select
your time and date, then
press Select to save it or long
press left arrow (back) to
cancel.

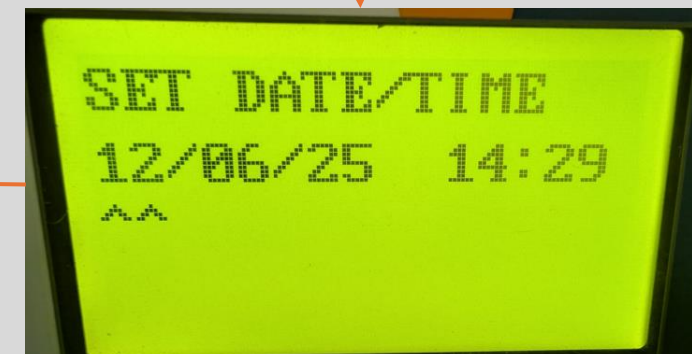

3. Verify that the time
is correct and
proceed to the next
step

Setting Tanks

4. Before setting the Tank head to Status to confirm which tank is connected

```
Tank 3  
Tank 4  
> Status  
Sound Settings
```

```
STATUS  
T1:CONNECTED  
>T2:NO PROBE  
T3:CONNECTED
```

```
Products  
Charts  
Tank 1  
> Tank 2
```

5. Press the back button and proceed to configure the corresponding tanks

6. Go to the Enable/Disable menu to enable the corresponding Tank.

```
PROBE 1
Status : ENABLED
> ON      OFF
```

7. Then configure the tank dimensions* inside the tank menu


```
EDIT TANK
>CAP=      0 L
SHAPE=REC
H=      0 mm
```

8. Save it and then set the product for your Tank

```
SELECT PRODUCT
UNKNOWN
> DIESEL
ADBLUE
```

9. Save it and exit the menu to confirm your tank


10. Check your tank and confirm the information

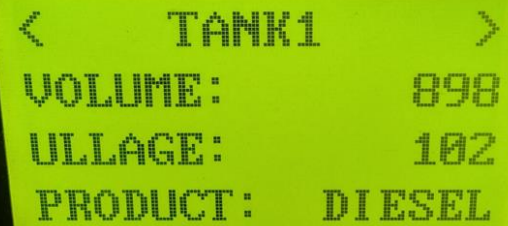

< TANK1 >
VOLUME: 898
ULLAGE: 102
PRODUCT: DIESEL

11. Long press the select button and the go to the tank menu

12. Select the Calibrate menu and set the current volume on your tank.

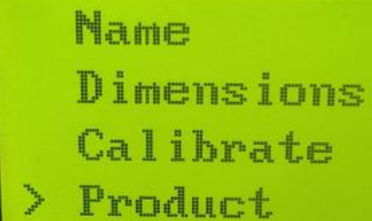

Name
Dimensions
Calibrate
> Product

13. Optionally you
can set your
alarms inside the
tank menu

```
SET ALARMS
>HI_HI    =000000
HIGH      =000000
LOW       =000000
```

Your tank gauge is
configured; you can read
the user manual to learn
about all the features in the
devices